

SmartStat™

**How To:**

Adjust Your “Hi-Lo”

Floor Temperature Settings



**SPEEDHEAT**

**Speedheat®**

Phone: 678-391-3244

Toll Free: 1-888-WARM FLOOR

[www.speedheat.us](http://www.speedheat.us)

*The World Leaders in Energy Efficient Electric Radiant Floor Heating*



# How To: Adjust Floor Temperature Settings

by Speedheat®



Press  
▲  
▼  
at the same time  
for 3 Seconds



After 3 Seconds,  
you should see  
"Info" flashing.



Press  
▲  
You should see  
"Pro" flashing.



Press  
▲  
again.  
You should see,  
"HiLo" flashing.



# How To: Adjust Floor Temperature Settings

by Speedheat®



Press  
✓  
To Select  
(You should see the  
current HI Temp now.)



Press  
△ or ▽  
To Adjust “Hi”  
Floor Temp  
Setting



Press  
✓  
To Select  
Hi Floor Temp  
(You should see  
“Lo” flashing now.)



Press  
△ or ▽  
To Adjust “Lo”  
Floor Temp  
Setting



## How To: Adjust Floor Temperature Settings *by Speedheat®*

9



**Speedheat®**

Phone: 678-391-3244

Toll Free: 1-888-WARM FLOOR

[www.speedheat.us](http://www.speedheat.us)

*The World Leaders in Energy Efficient Electric Radiant Floor Heating*