



# CarpetMate™ 120V SmartStat™ Hookup Instructions

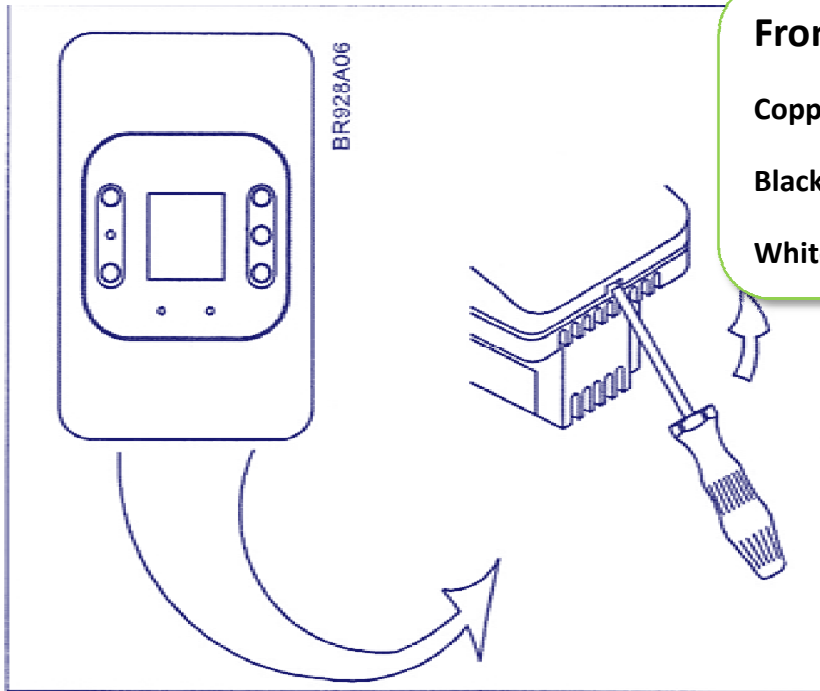

**From Distribution Board**

- Copper or Green (Ground)
- Black (Hot/Live)
- White (Neutral)

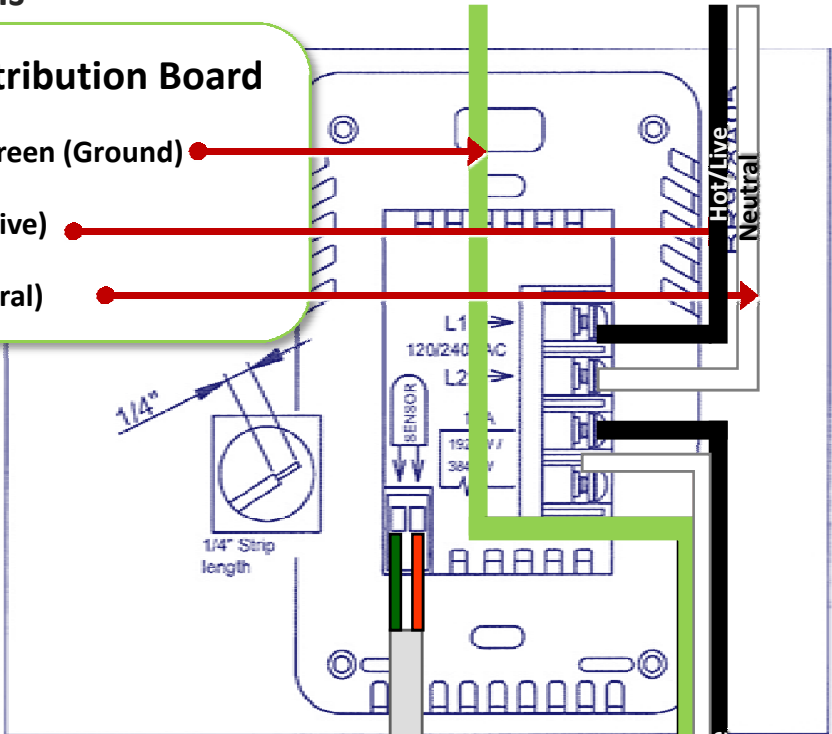

**IMPORTANT!**  
 FLOOR SENSOR MUST BE CONNECTED!  
 SmartStat™ will not work if the floor sensor is not connected, and error “e2” will show on thermostat.

**From Floor Sensor**  
 Gray (2 core)

**From Speedheat® Heater Panel**

- Green (Ground)
- White (Neutral)
- Black (Hot/Live)

**Speedheat® US**  
 Phone: 678-391-3244  
 Toll Free: 1-888-WARM FLOOR  
[www.speedheat.us](http://www.speedheat.us)  
**GENERATION4™ FLOOR HEATING** The World Leaders in Energy Efficient Electric Radiant Floor Heating!

