



CarpetMate™ 120V SmartStat™ Hookup Instructions

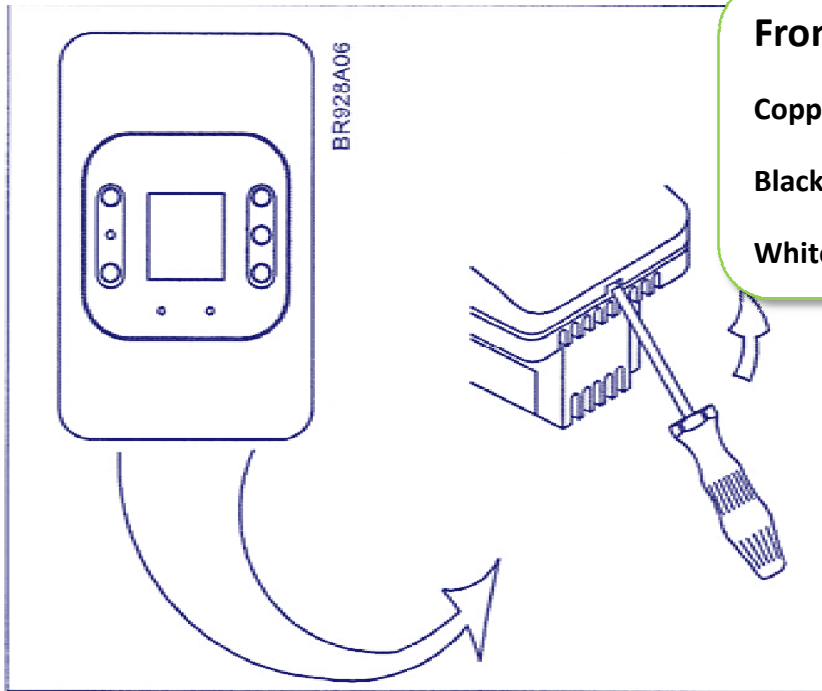

From Distribution Board

- Copper or Green (Ground)
- Black (Hot/Live)
- White (Neutral)

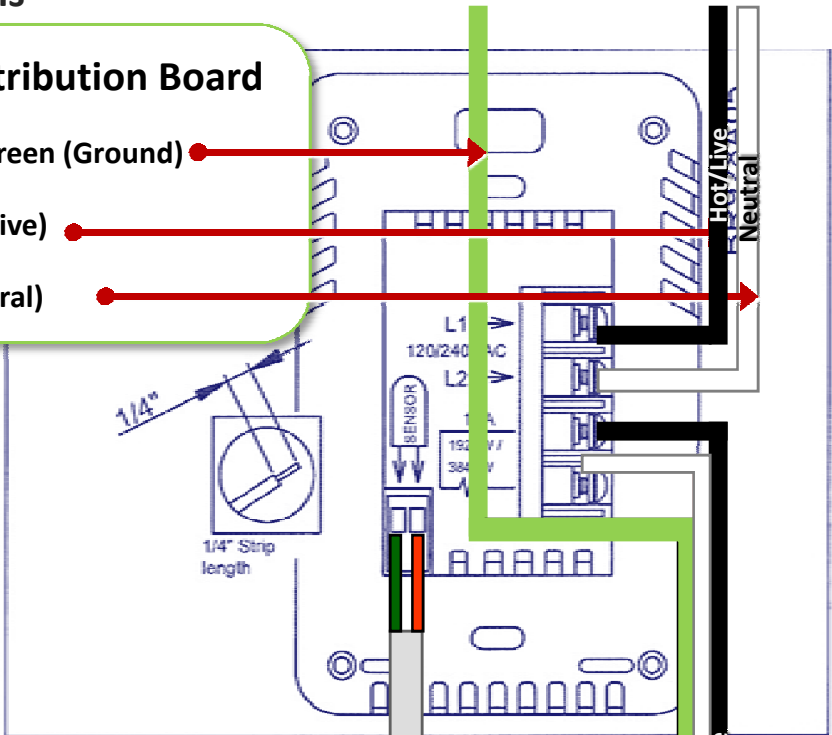

IMPORTANT!
 FLOOR SENSOR MUST BE CONNECTED!
 SmartStat™ will not work if the floor sensor is not connected, and error "e2" will show on thermostat.

From Floor Sensor
 Gray (2 core)

From Speedheat® Heater Panel

- Green (Ground)
- White (Neutral)
- Black (Hot/Live)



Speedheat® US

Phone: 678-391-3244
 Toll Free: 1-888-WARM FLOOR
www.speedheat.us

GENERATION4™ FLOOR HEATING The World Leaders in Energy Efficient Electric Radiant Floor Heating!