


SETTING THE CLOCK AND SELECTING THE TIME & TEMPERATURE SCALE


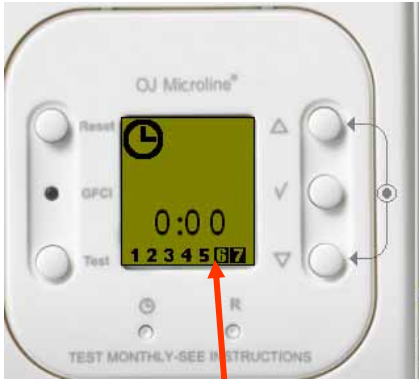


First time power is connected, the clock will be flashing and must be set. Default is a 24hr. clock format.

To set clock, or buttons until correct time is displayed. Then to accept.

Day 1 will begin to flash.

or until correct day is flashing. Then to accept.

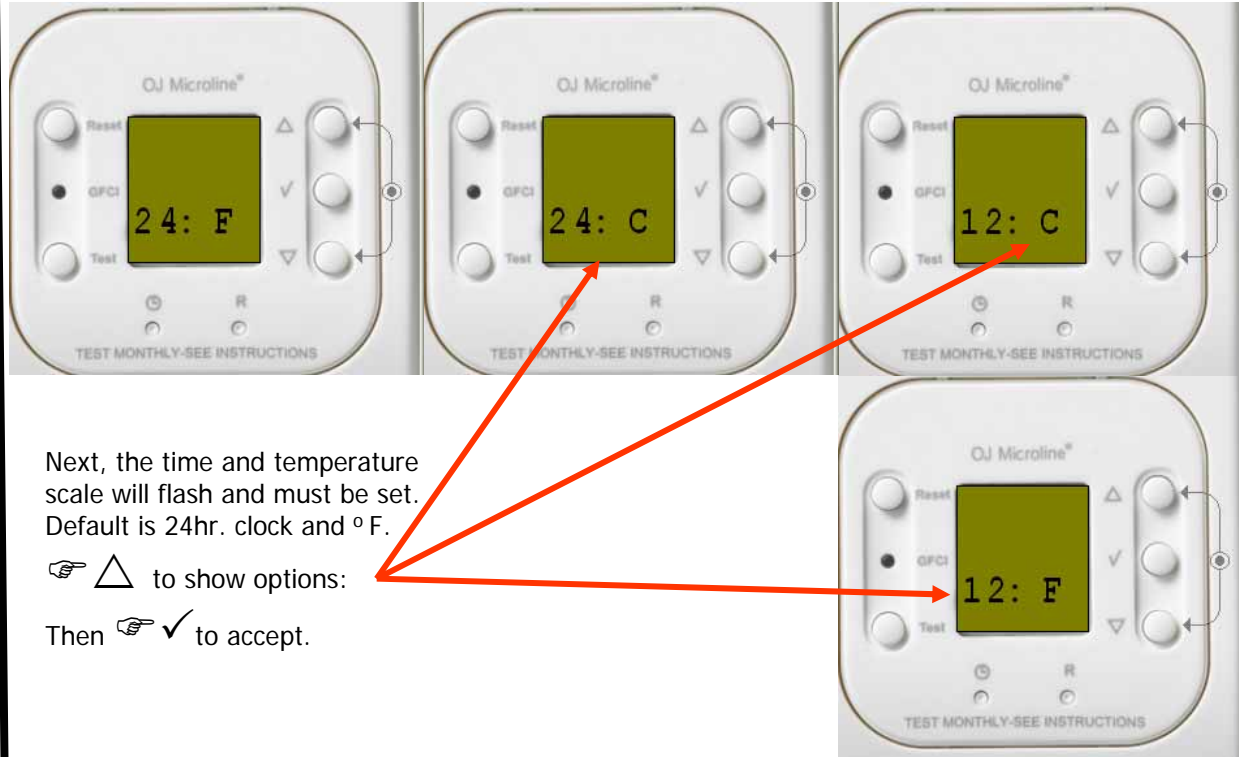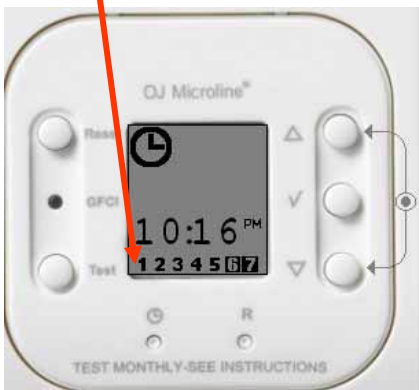


Next, the time and temperature scale will flash and must be set. Default is 24hr. clock and °F.

to show options:

Then to accept.


On completion of Step One, the display will look similar to this.

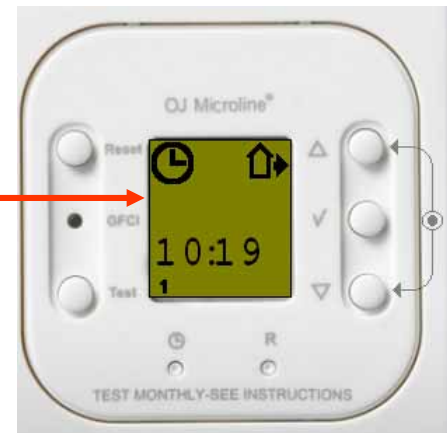

S
T
E
P



O
N
E

4-EVENT TIME & TEMPERATURE PROGRAMMING – MONDAY TO FRIDAY

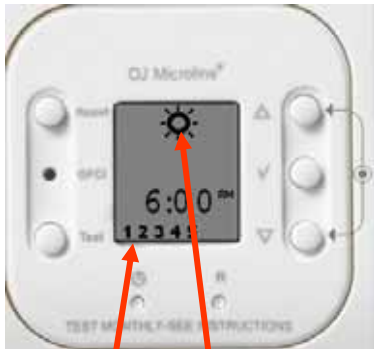

AWAKEN

Press OK ✓ button for 3 seconds. Sunrise symbol and weekdays will show and Start time will flash. To adjust start time ⬅️ Δ or ▽. Then ⬅️ ✓ to accept. Next, Start temperature will flash. ⬅️ Δ or ▽ until correct temperature displayed. Then ⬅️ ✓ to accept.

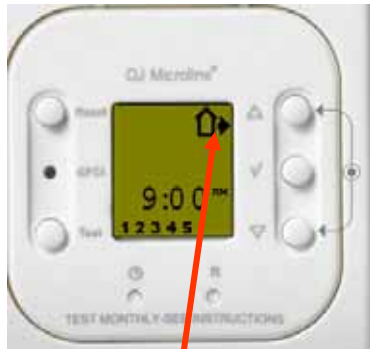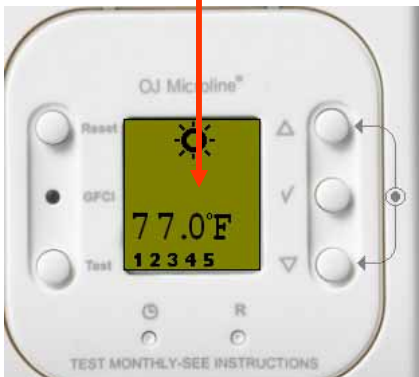

DEPARTURE

Next, Departure symbol will show and Departure time will flash. To adjust Departure time ⬅️ Δ or ▽. Then ⬅️ ✓ to accept. Next, Departure temperature will flash. ⬅️ Δ or ▽ until correct temperature displayed. Then ⬅️ ✓ to accept.




RETURN

Next, Return symbol will show and Return time will flash. To adjust Return time ⬅️ Δ or ▽. Then ⬅️ ✓ to accept. Next, Return temperature will flash. ⬅️ Δ or ▽ until correct temperature displayed. Then ⬅️ ✓ to accept.



SLEEP


Next, Sleep symbol will show and Sleep time will flash. To adjust Sleep time ⬅️ Δ or ▽. Then ⬅️ ✓ to accept. Next, Sleep temperature will flash. ⬅️ Δ or ▽ until correct temperature displayed. Then ⬅️ ✓ to accept.

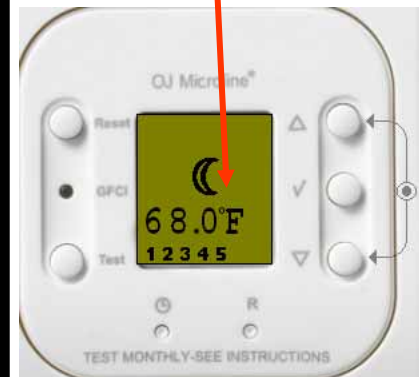

S
T
E
P


T
W
O

4-EVENT TIME & TEMPERATURE PROGRAMMING – WEEKENDS

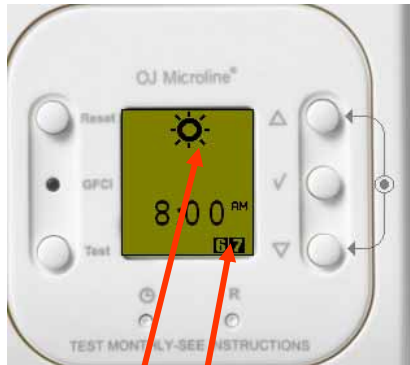

AWAKEN

Next, Awaken symbol and weekend days will show and Awaken time will flash. To adjust Awaken time or . Then to accept. Next, Awaken temperature will flash. or until correct temperature displayed. Then to accept.

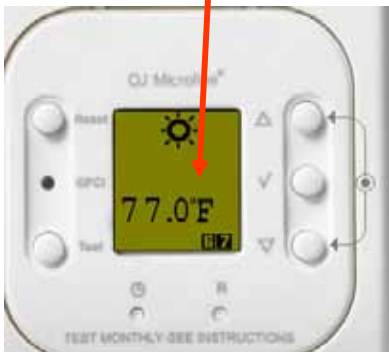

SLEEP

Next, Sleep symbol will show and Sleep time will flash. To adjust Sleep time or . Then to accept. Next, Sleep temperature will flash. or until correct temperature displayed. Then to accept.



S
T
E
P

T
H
R
E
E