


TileWarm™ Installation

1. Lay it out 2. Stick it down 3. Set the Tile

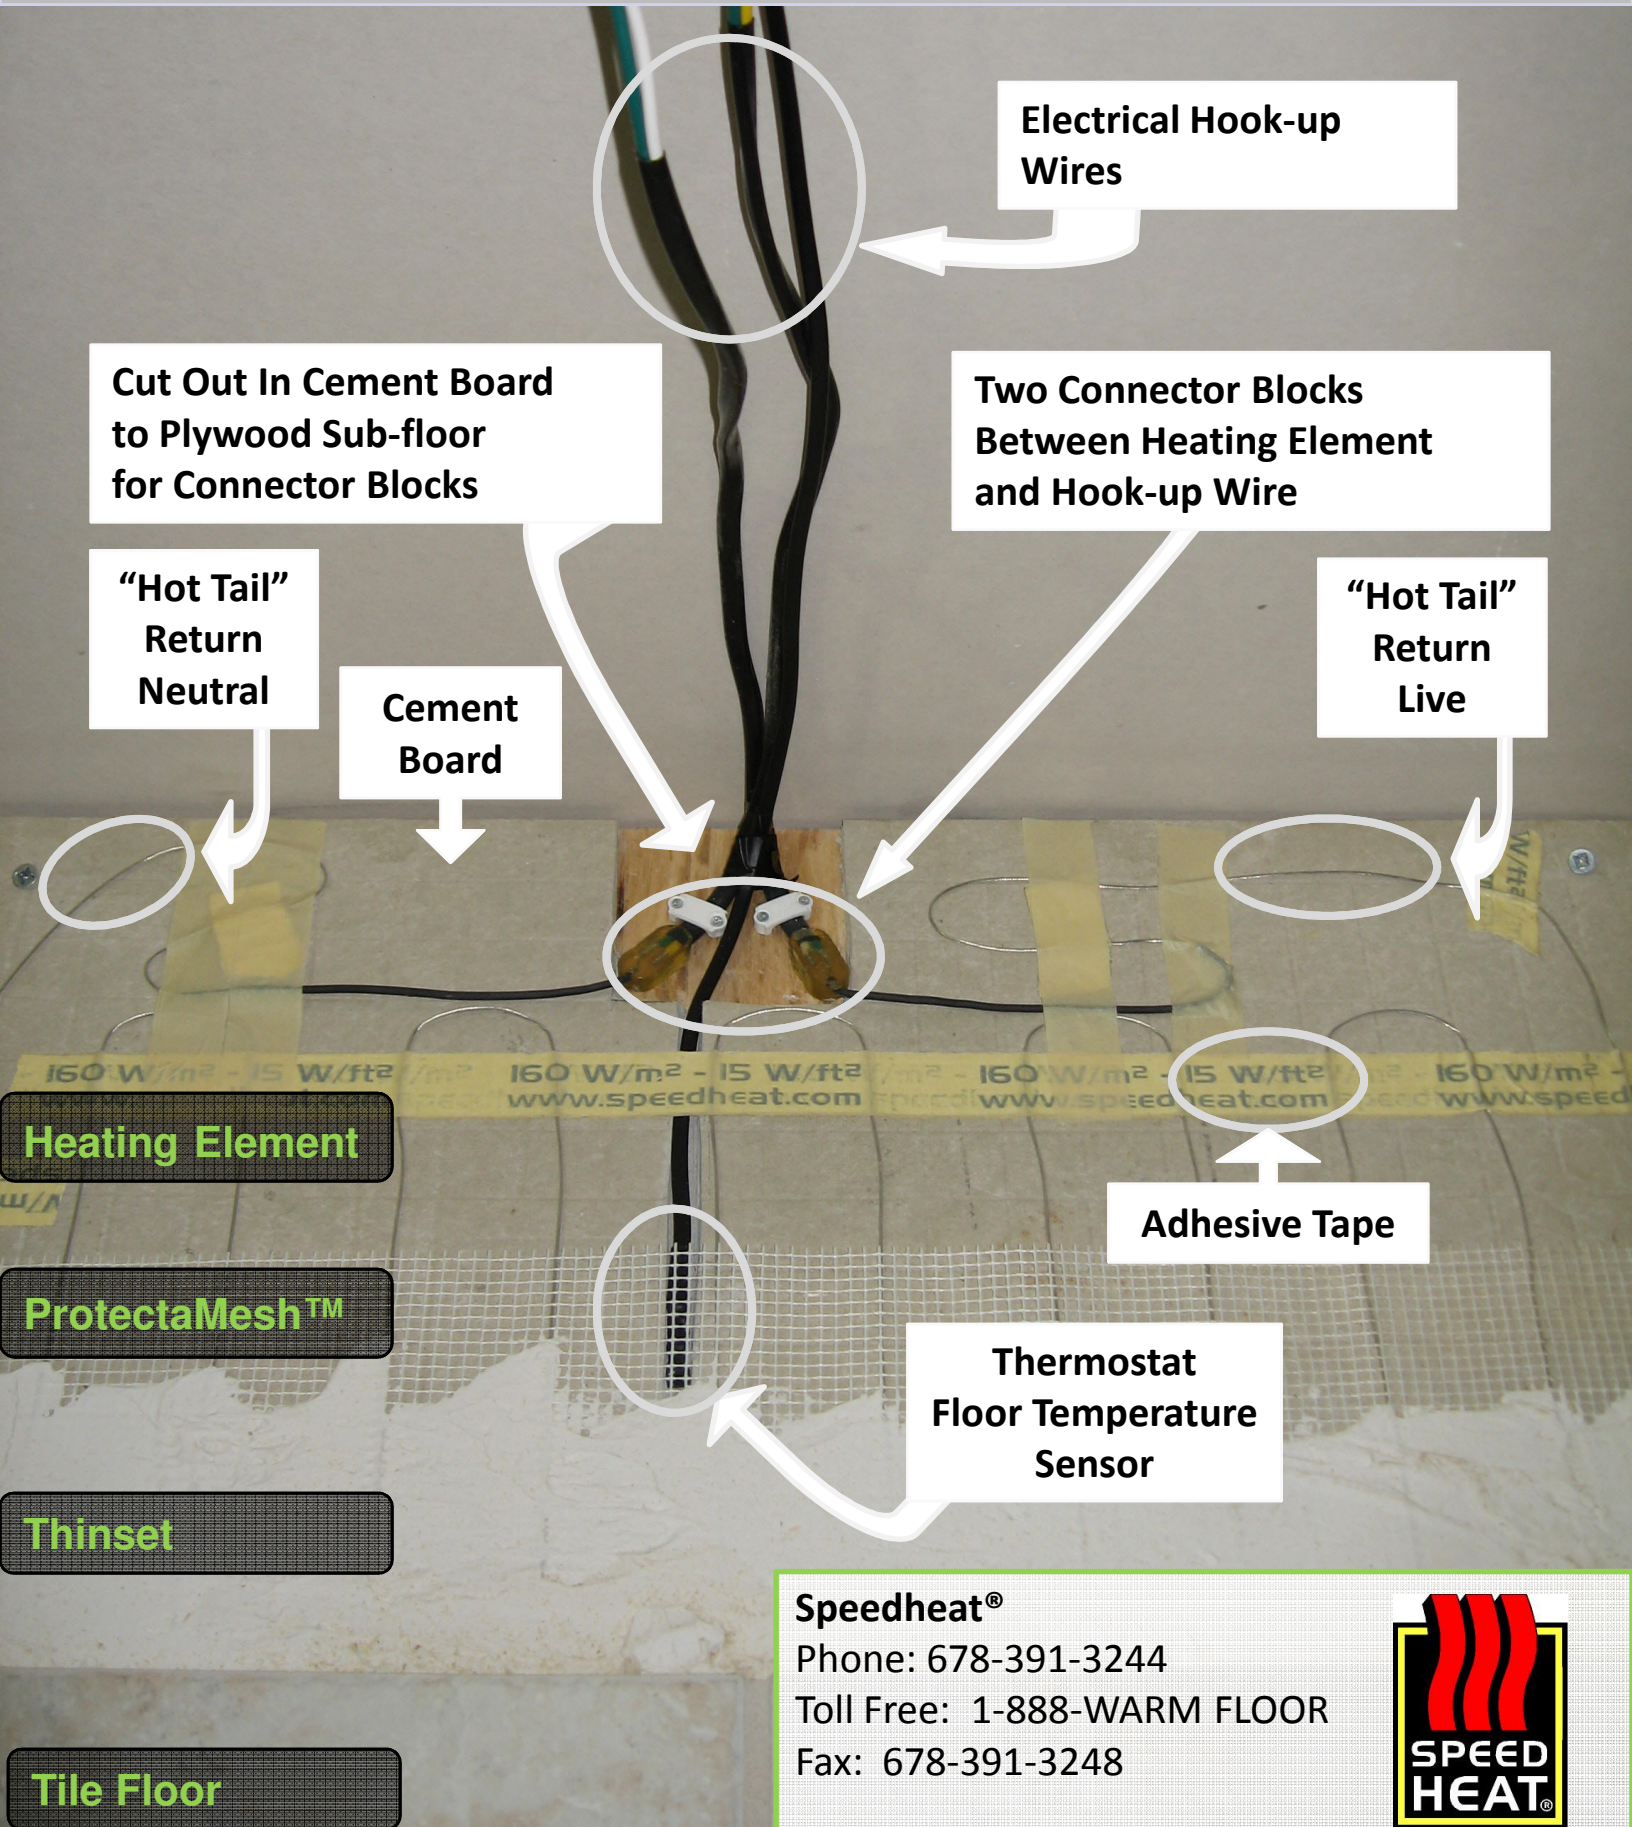

Electrical Hook-up Wires

Two Connector Blocks Between Heating Element and Hook-up Wire

Cut Out In Cement Board to Plywood Sub-floor for Connector Blocks

“Hot Tail” Return Neutral

Cement Board

“Hot Tail” Return Live

Heating Element

ProtectaMesh™

Thinset

Tile Floor

Adhesive Tape

Thermostat Floor Temperature Sensor

Speedheat®
Phone: 678-391-3244
Toll Free: 1-888-WARM FLOOR
Fax: 678-391-3248

www.speedheat.us

