



**Speedheat®**  
**WoodBeWarmer™**  
 Installation Instructions  
 Nailed Hardwood Floors

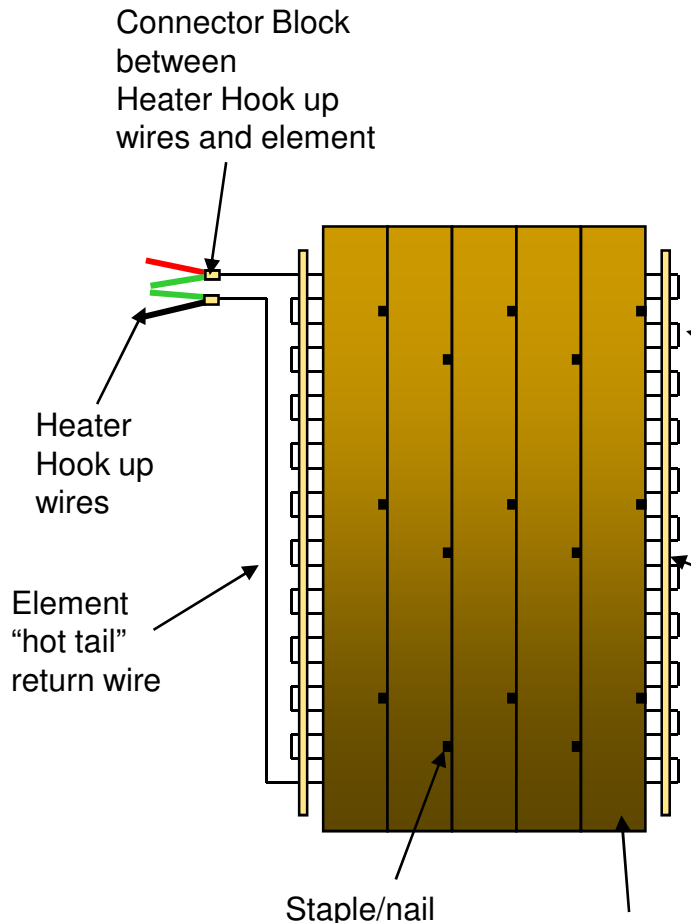

Wood planks must run in opposite direction (North/South) to the heating element wires (East/West).

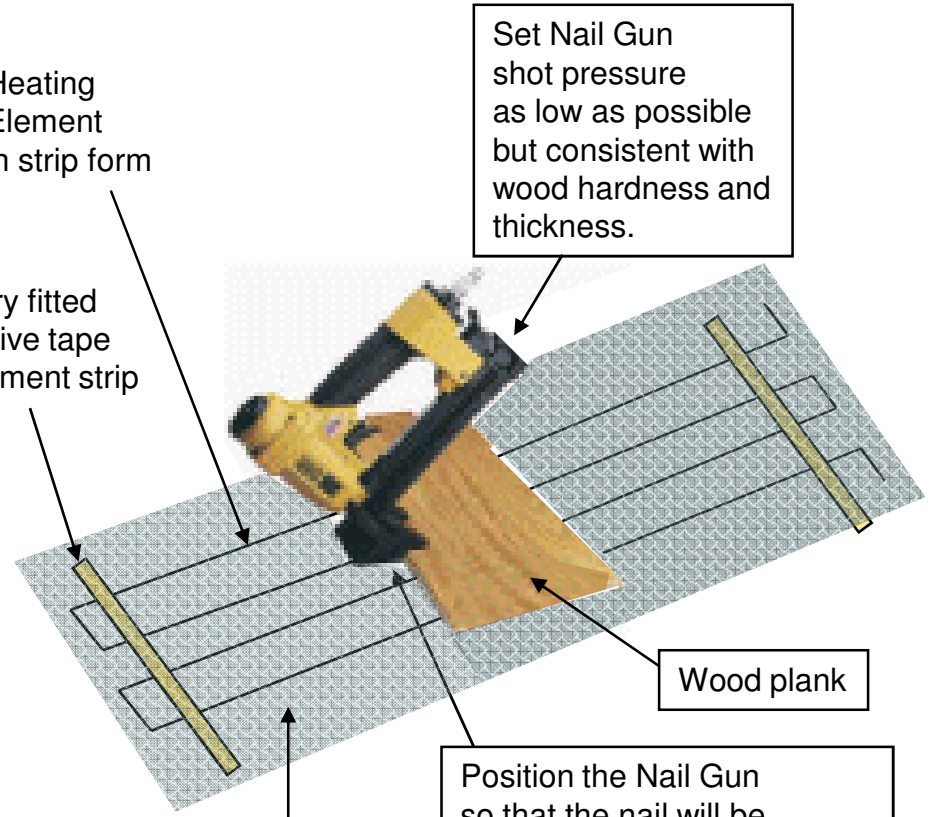

Position the Nail Gun so that the nail will be shot between the element wire runs. Extreme care must be taken in positioning the nail gun, so floor installation will take 50% to 75% longer.



120 Arnold Mill Park, Suite 100  
 Woodstock, GA 30188  
**Ph:** 1-888-WARM FLOOR  
**Fax:** 888-927-6357  
[www.speedheat.us](http://www.speedheat.us)