



**GENERATION4™**  
**FLOOR HEATING**

# Hot Tail Instructions

- These are instructions on how to create extended hot tails, so that cold leads can reach the thermostat in Speedheat® heating panels.
- These instructions do not apply to flexible heating strips.

## **WARNING!**

### **DO NOT CUT ELEMENT WIRE!**

Exercise extreme caution when performing these steps. Failure to carefully follow instructions may result in damage to the heating panel.

## **Speedheat® US**

Woodstock, Georgia

Phone: 678-391-3244

Toll Free: 1-888-WARM FLOOR

[www.speedheat.us](http://www.speedheat.us)



**GENERATION4™**  
**FLOOR HEATING**

SPEEDHEAT®


## Hot Tails: Step I



**Carefully** Insert Scissors into the Polyester Laminate at the Points Marked.  
**Carefully** Cut Along Red Dotted Line.

**IMPORTANT! DO NOT CUT WIRE**

## Hot Tails: Step II

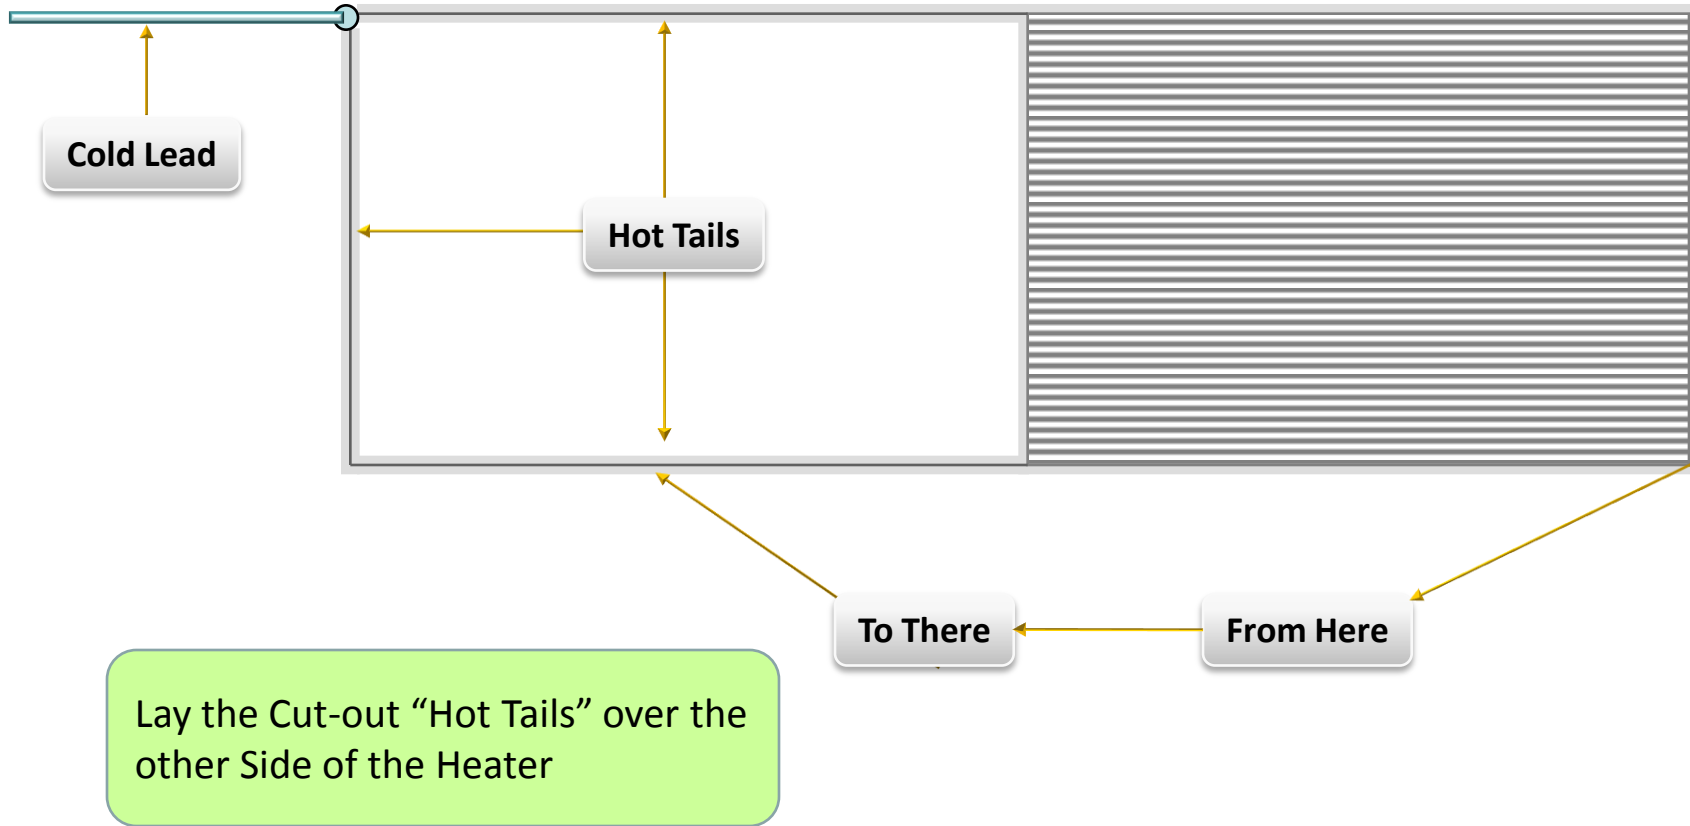

### Speedheat® US

Woodstock, Georgia


Phone: 678-391-3244

Toll Free: 1-888-WARM FLOOR

[www.speedheat.us](http://www.speedheat.us)




## Hot Tails: Step III

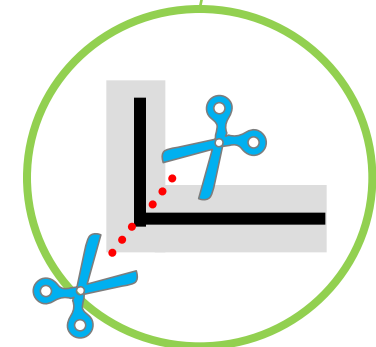

Free up the element at this corner, so it can be laid flat on the floor.


Cut the polyester area of the Speedheat® heating panel as shown.

**Speedheat® US**  
Woodstock, Georgia  
Phone: 678-391-3244  
Toll Free: 1-888-WARM FLOOR  
[www.speedheat.us](http://www.speedheat.us)




**SPEED HEAT®**  
GENERATION4™  
FLOOR HEATING

## Hot Tails: Step IV

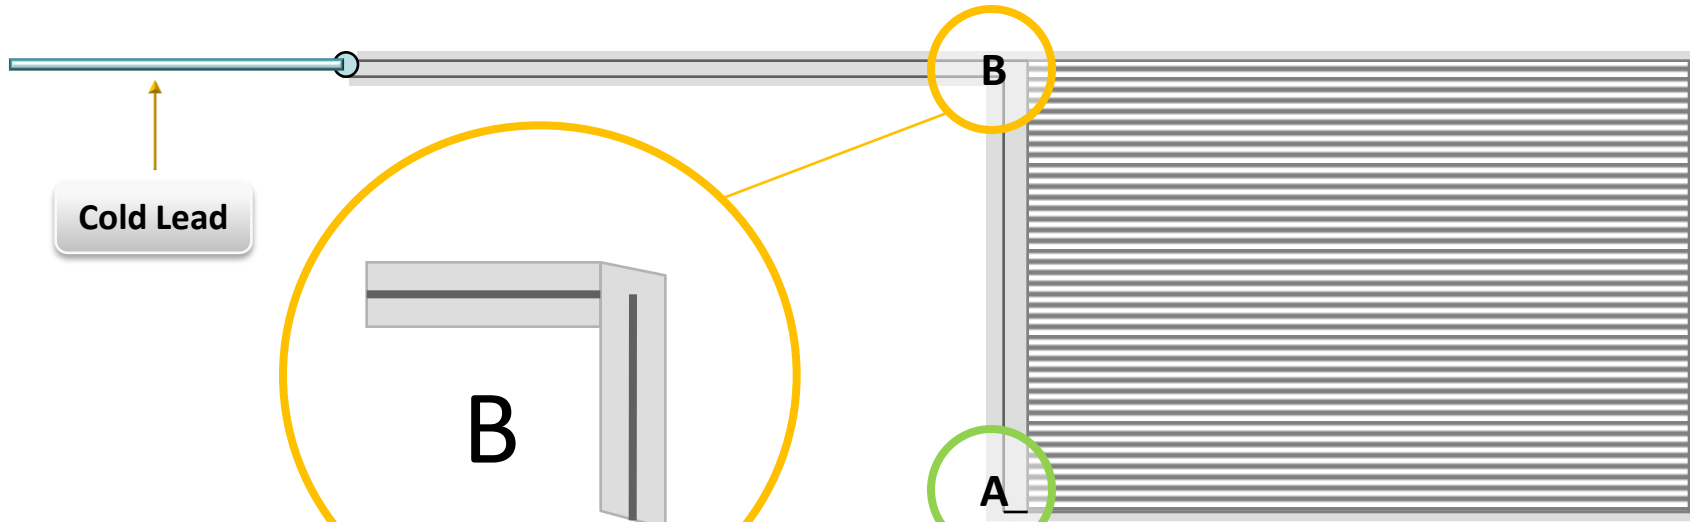

Fold the Element Wire at Corner "B" so it Runs Parallel With the other Part of the "Hot Tail".

Fold the Element Wire at Corner "A" so it Runs Parallel with the Edge of the Panel.

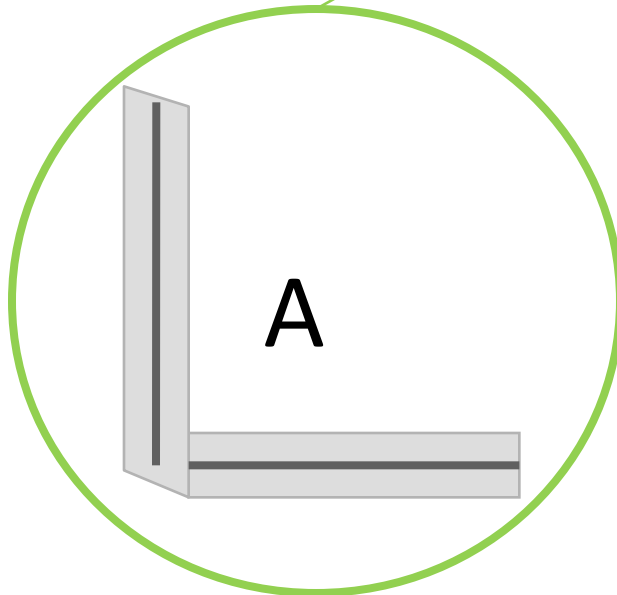

### Speedheat® US

Woodstock, Georgia


Phone: 678-391-3244

Toll Free: 1-888-WARM FLOOR

[www.speedheat.us](http://www.speedheat.us)



**Making Hot Tail Turns**

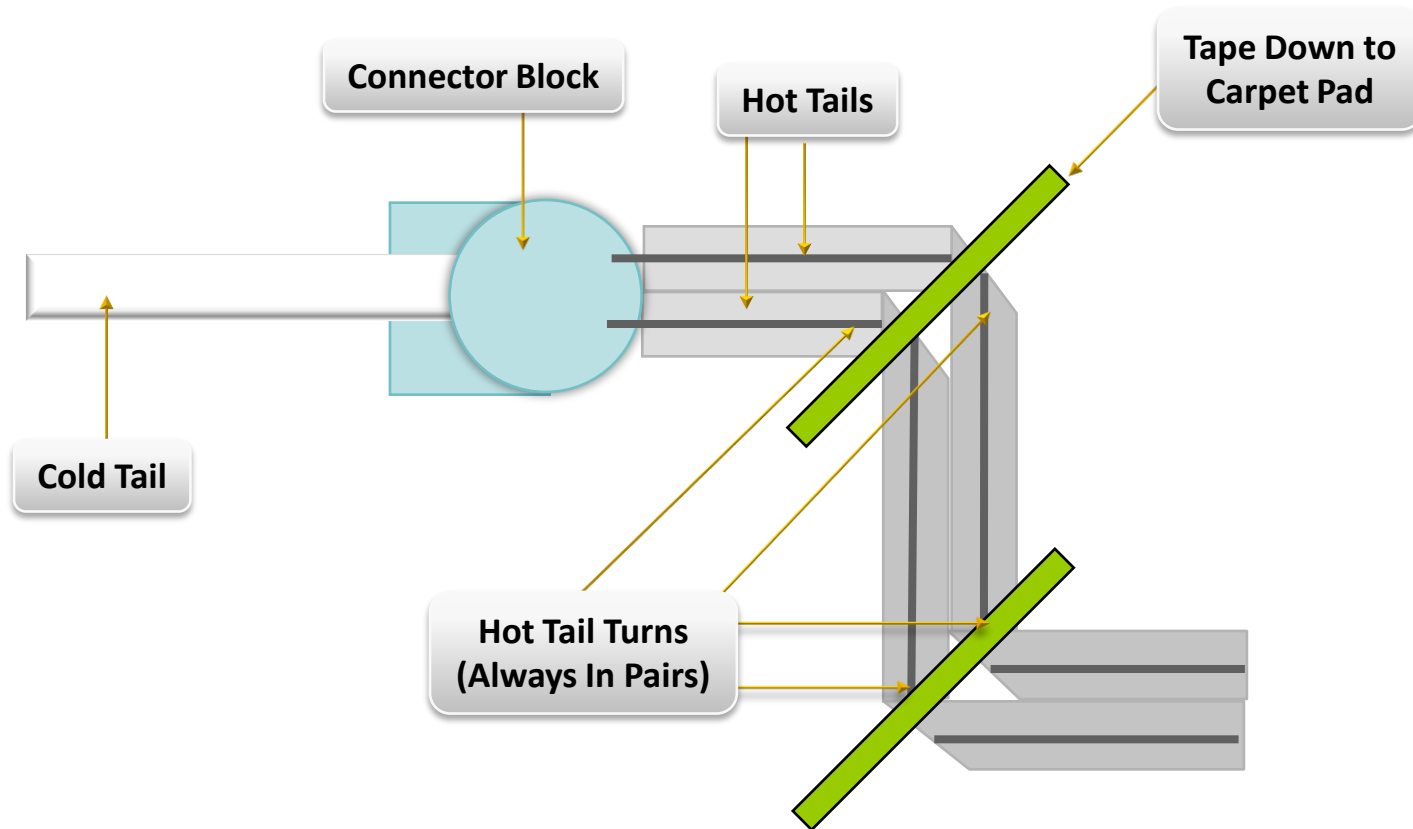

**Speedheat® US**

Woodstock, Georgia

Phone: 678-391-3244

Toll Free: 1-888-WARM FLOOR

[www.speedheat.us](http://www.speedheat.us)



SPEEDHEAT®