



GENERATION4™
FLOOR HEATING

Hot Tail Instructions

- These are instructions on how to create extended hot tails, so that cold leads can reach the thermostat in Speedheat® heating panels.
- These instructions do not apply to flexible heating strips.

WARNING!

DO NOT CUT ELEMENT WIRE!

Exercise extreme caution when performing these steps. Failure to carefully follow instructions may result in damage to the heating panel.

Speedheat® US

Woodstock, Georgia

Phone: 678-391-3244

Toll Free: 1-888-WARM FLOOR

www.speedheat.us



SPEEDHEAT®


Hot Tails: Step I



Carefully Insert Scissors into the Polyester Laminate at the Points Marked.
Carefully Cut Along Red Dotted Line.

IMPORTANT! DO NOT CUT WIRE

Hot Tails: Step II

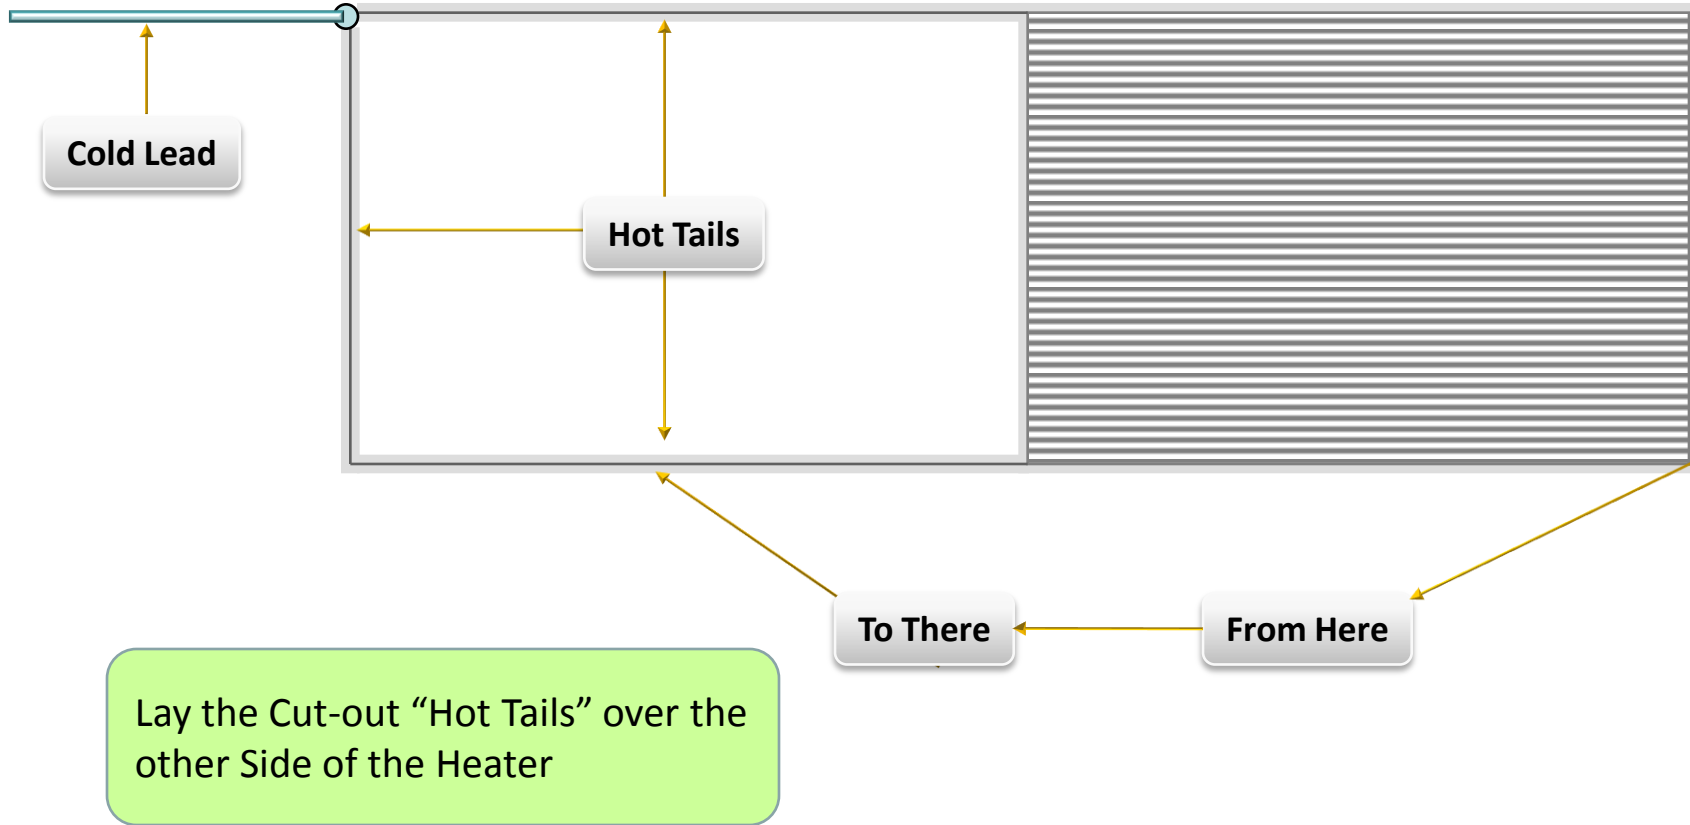

Speedheat® US

Woodstock, Georgia

Phone: 678-391-3244

Toll Free: 1-888-WARM FLOOR

www.speedheat.us




Hot Tails: Step III



Cold Lead

Free up the element at this corner, so it can be laid flat on the floor.

Cut the polyester area of the Speedheat® heating panel as shown.

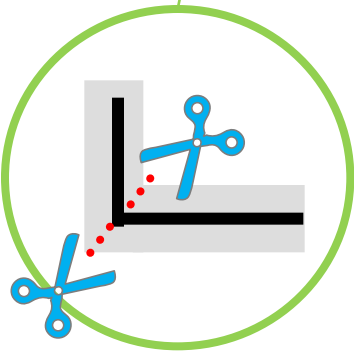

Speedheat® US

Woodstock, Georgia


Phone: 678-391-3244

Toll Free: 1-888-WARM FLOOR

www.speedheat.us




Hot Tails: Step IV

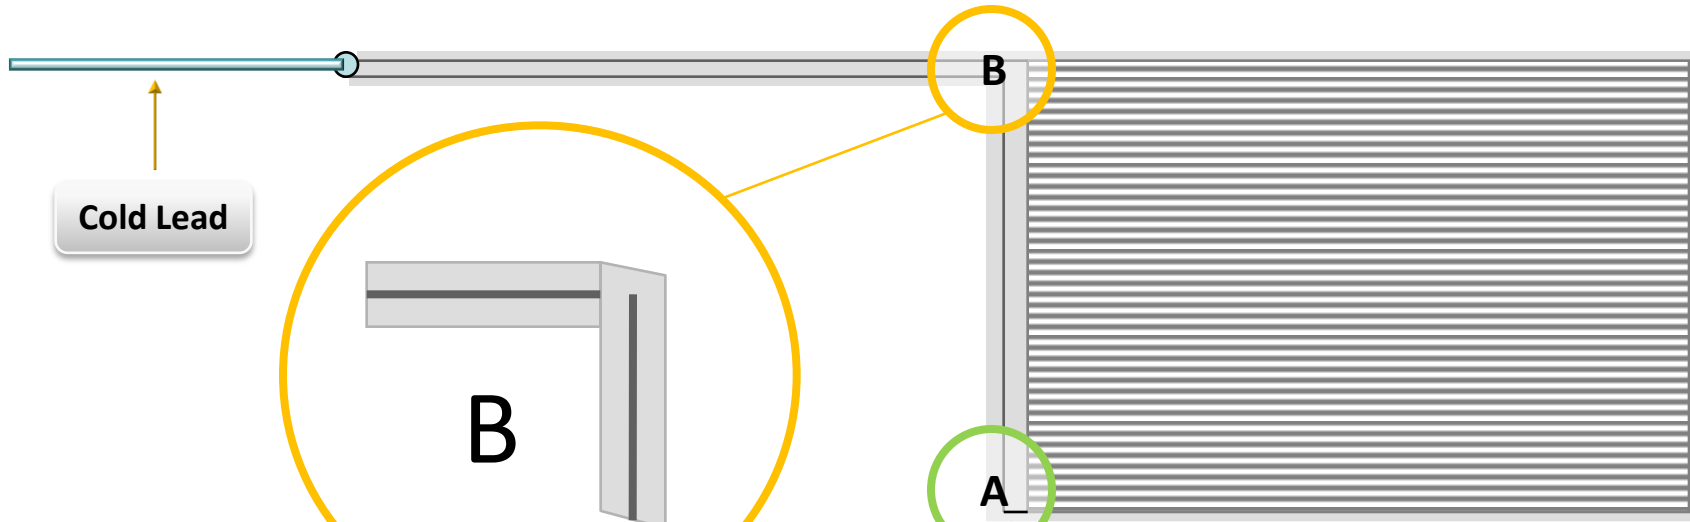

Fold the Element Wire at Corner "B" so it Runs Parallel With the other Part of the "Hot Tail".

Fold the Element Wire at Corner "A" so it Runs Parallel with the Edge of the Panel.

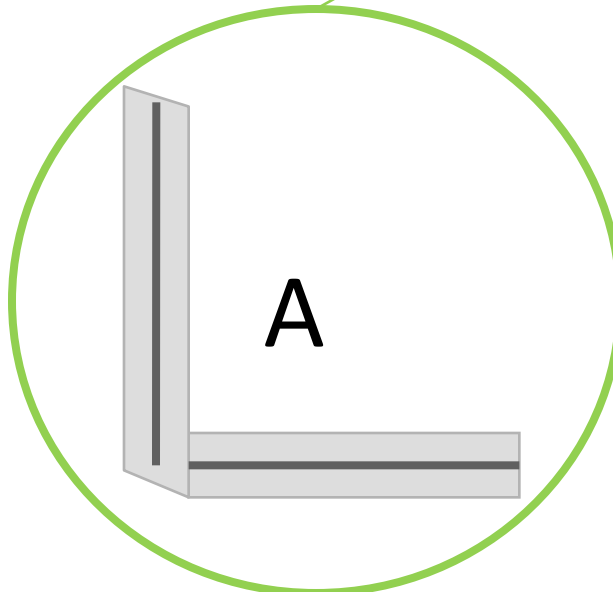

Speedheat® US

Woodstock, Georgia


Phone: 678-391-3244

Toll Free: 1-888-WARM FLOOR

www.speedheat.us



Making Hot Tail Turns

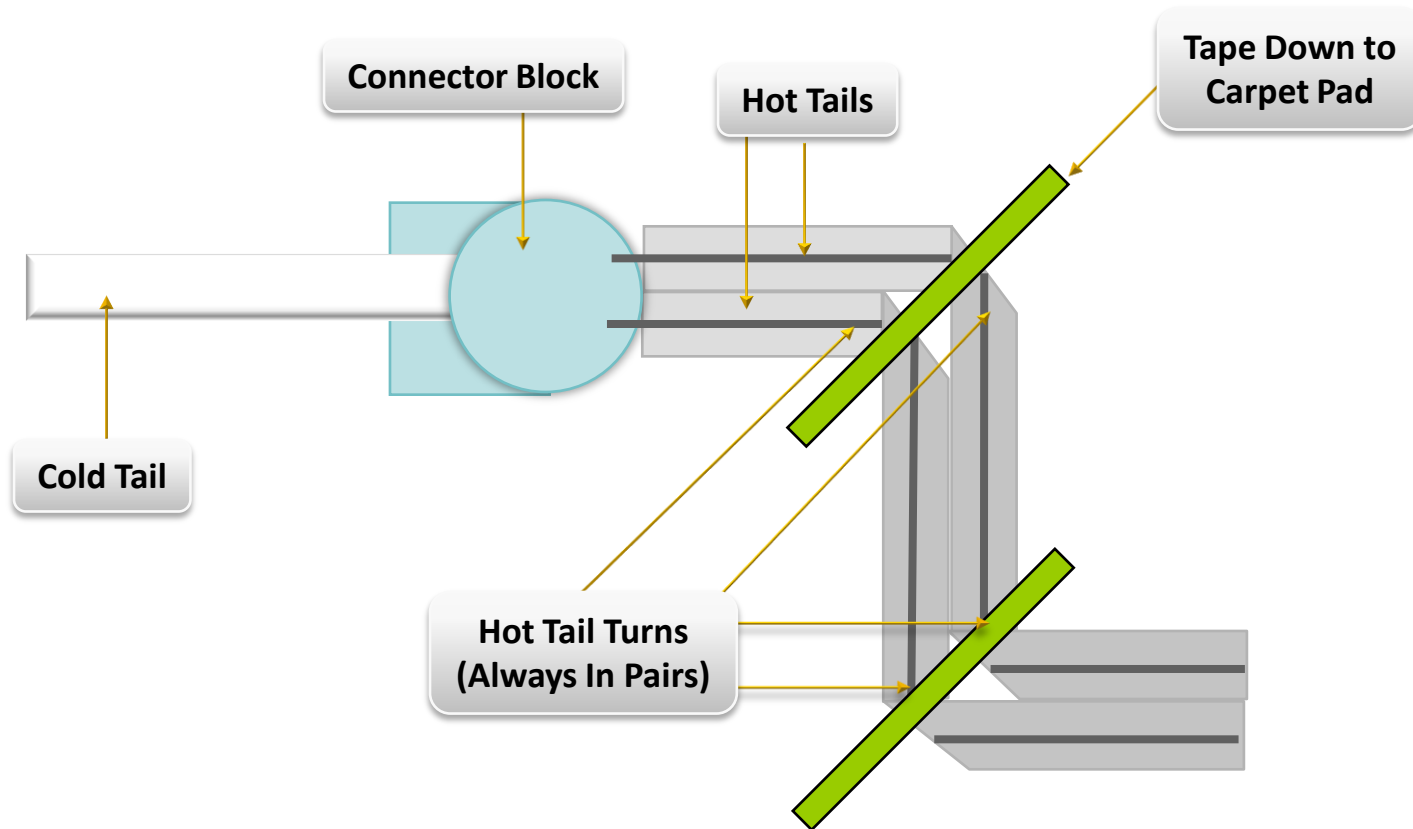

Speedheat® US

Woodstock, Georgia

Phone: 678-391-3244

Toll Free: 1-888-WARM FLOOR

www.speedheat.us





CarpetMate™ is Carpet Heating
by *Speedheat®*

Thank you for purchasing your new
CarpetMate™ under carpet heating
system by Speedheat® Floor Heating!

Enjoy!

Speedheat® is Floor Heating
www.speedheat.us