


SPEEDHEAT® Tear & Turn Instructions

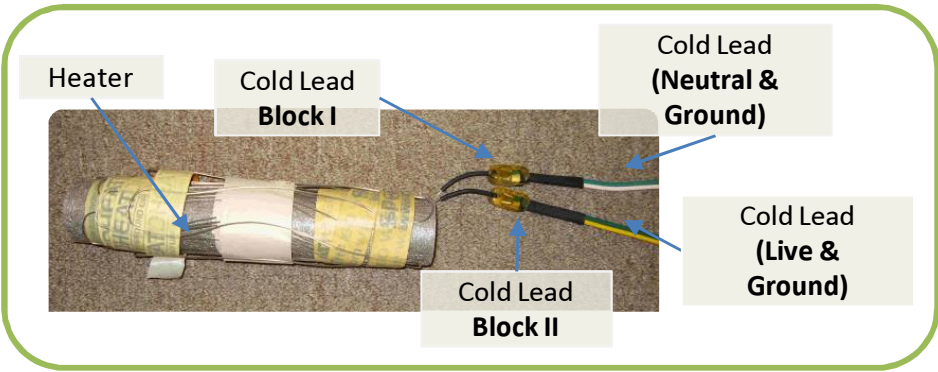

1. **Cut out Subfloor to Countersink Cold Lead Blocks & Floor Sensor**

2. **Secure Block I in position for heater to be rolled out into Section I of floor.**

3. **Roll out Heater into Section I of Floor**

4. **Section II: Cut/tear 2Side™ Tape at Outer Edge to allow heater to be turned into Section II of Floor.**

5. **Cut/tear 2Side™ Tape on Inner Edge to allow heater to be turned into Section II of Floor.**

6. **Turn Heater into Section II of Floor**

7. **Cut/tear 2Side™ Tape as needed to fill all floor sections; eliminating cold spots.**

8. **Cut / tear 2Side™ Tape as needed to create a "Hot Tail" to return Block II to cutout in subfloor.**
Secure Block II by Block I so cold leads can be pulled up to SmartStat™ through conduit behind drywall.