



SPEEDHEAT® WoodBeWarmer™ - Strip Installation Instructions Nailed Hardwood Floors

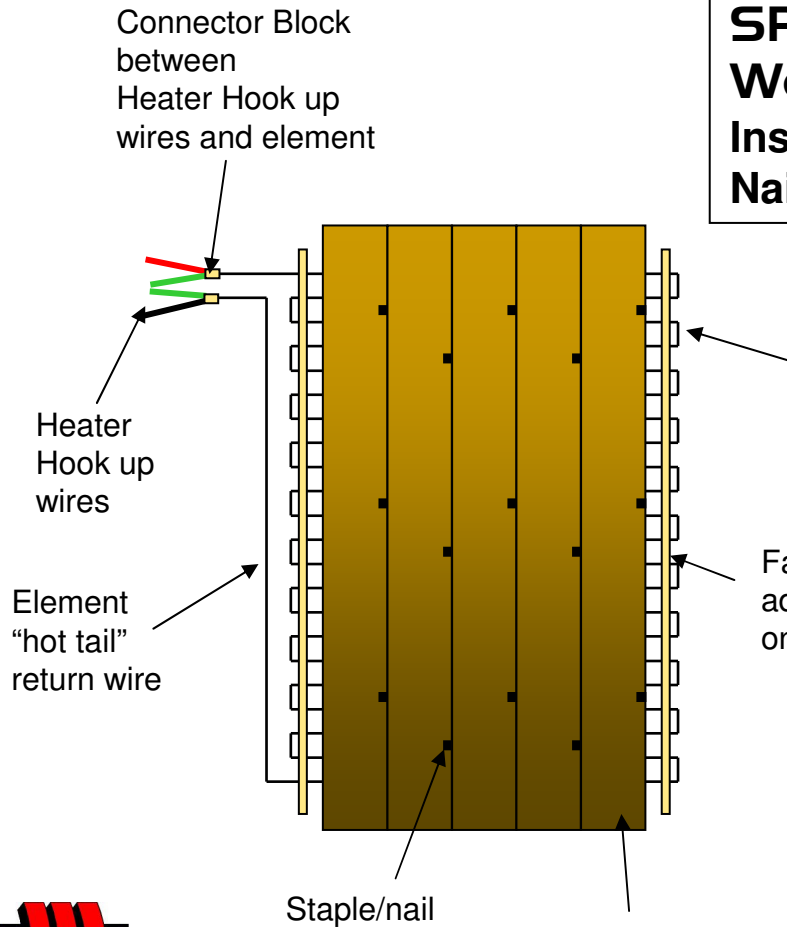

Heating Element in strip form

Factory fitted adhesive tape on element strip

Set Nail Gun shot pressure as low as possible but consistent with wood hardness and thickness.

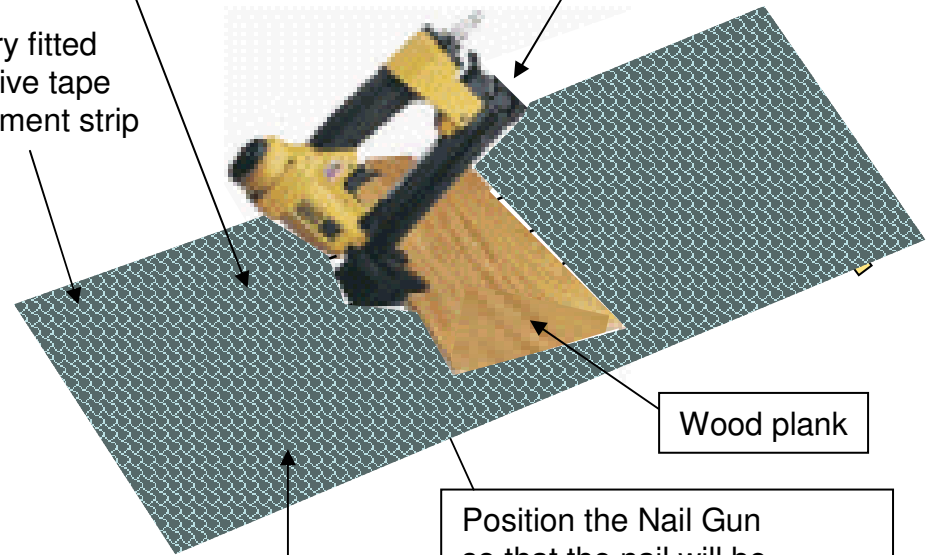

Position the Nail Gun so that the nail will be shot between the element wire runs. Extreme care must be taken in positioning the nail gun, so floor installation will take 50% to 75% longer.

Wood planks must run in opposite direction (North/South) to the heating element wires (East/West).



GENERATION 4™
FLOOR HEATING

120 Arnold Mill Park, Suite 100
Woodstock, GA 30188
Ph. 888-Warm Floor (927-6356)
Fax: 888-927-6357
www.speedheat.us